


Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

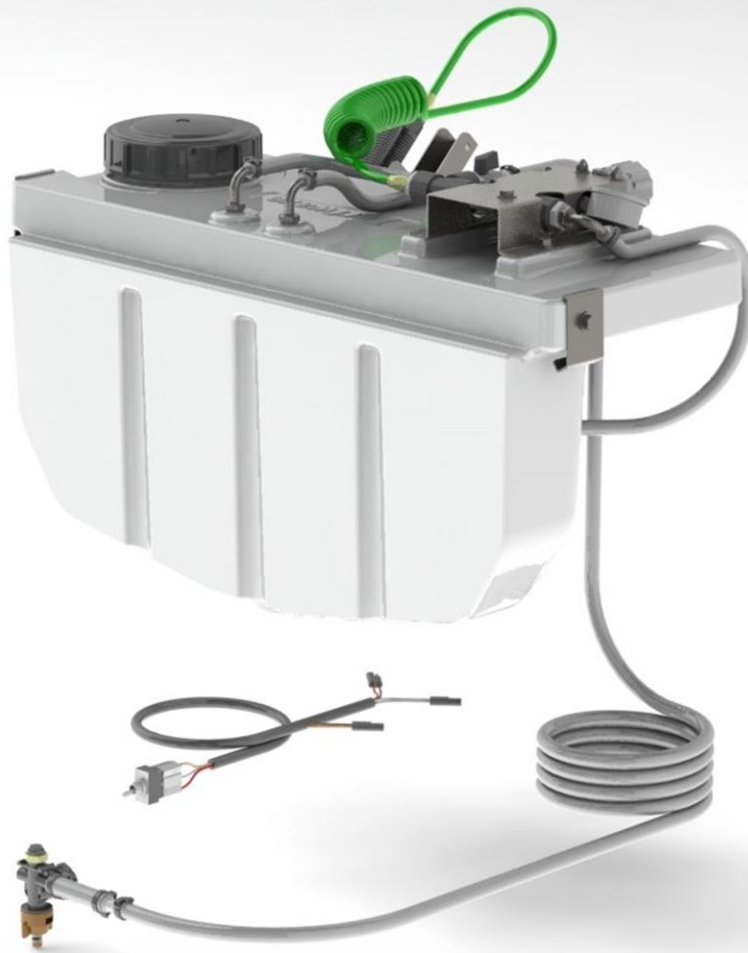

Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 1 ... Install Dashboard Toggle Switch

Using template provided, locate and center punch hole for toggle switch.




Using a step-drill, drill hole to 1/2" diameter and install toggle switch with notch positioned as shown.



Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 2 ... Install Auxiliary Wiring Harness

Run auxiliary wiring harness along main harness; zip-tie harness as required.

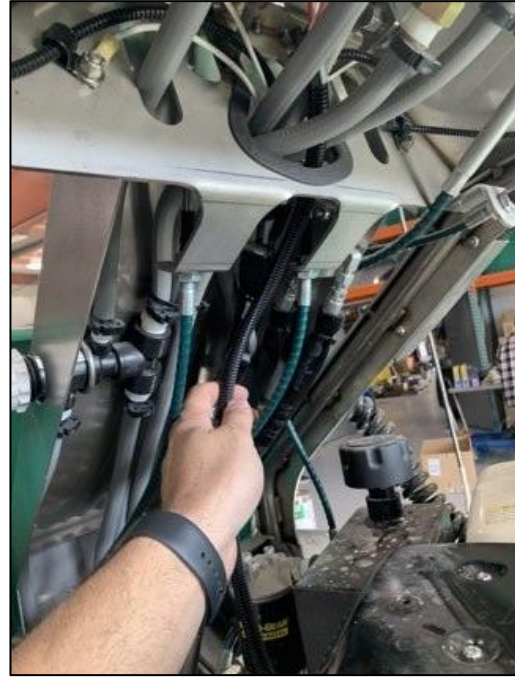

Unplug main pump and harness; connect auxiliary harness per labeled leads.



Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 2 (cont.) ... Install Auxiliary Wiring Harness

Plug Harness into back of toggle switch installed on dashboard. Make sure toggle switch connector is aligned with the orange wire to the top side of the switch as shown below.



Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 3 ... Install Spray Tank

Insert spray tank over the rear hopper wall with the hopper between the pump mounting plate and auxiliary tank.



Use the 1/4-20 bolts & nuts and 1/4" flat washers provided to fasten the pump mounting plate to the existing holes in the hood.



Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 4 ... Install Tank Clips

Install tank clips using 5/16-18 bolts & washers provided. Make sure tank is pushed firmly against rear hopper wall before tightening.



Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 5 ... Replace Hose on Existing Spray Nozzle

Prior to installing the auxiliary spray nozzle, the existing hose on the outer RH spray nozzle must be replaced to clear the new nozzle. Remove the existing hose and replace with the 14" hose included with the kit (re-use the existing hose clamps).



Route the 14" hose along the inside surface of front bumper as shown below (image includes installed auxiliary nozzle)



Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 6 ... Install Supply Hose

Route the supply line through the lower front deck. Find existing open hole in the front deck and feed 3/8" x 72" long supply hose down through the top of the deck. Make sure the hose goes over the top of the front axle; pull out approx. 16" of hose.



Run hose through the bottom of the nose cone and pull hose out (approx. 3") through the open hole in the RH bumper support.



NOTE: On older units, the RH bumper support may not include the extra hole for routing the supply line through. In this case, use a step drill to drill a 3/4" hole adjacent to the existing hole or contact Turfware for a replacement bumper support.

Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 7 ... Install Spray Nozzle



Using the hose clamps provided, connect the spray nozzle to the supply line and install the nozzle assembly on the front bumper as shown below.



Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 8 ... Connect Supply Hose to On-Off Valve

Run supply hose through existing hole in dashboard frame up to the on-off valve on the auxiliary tank regulator. Use hose clamps provided to connect the hose to the valve.



Double-check all hose clamps to ensure all are tight to prevent leakage.


Installation of 8.25 Gal. Spot Spray Auxiliary Tank (TR360)

STEP 9 ... Install Spray Wand Holster

Using existing hardware, relace the current single holster with the double spray wand holster provided in the kit.



FINAL ASSEMBLY

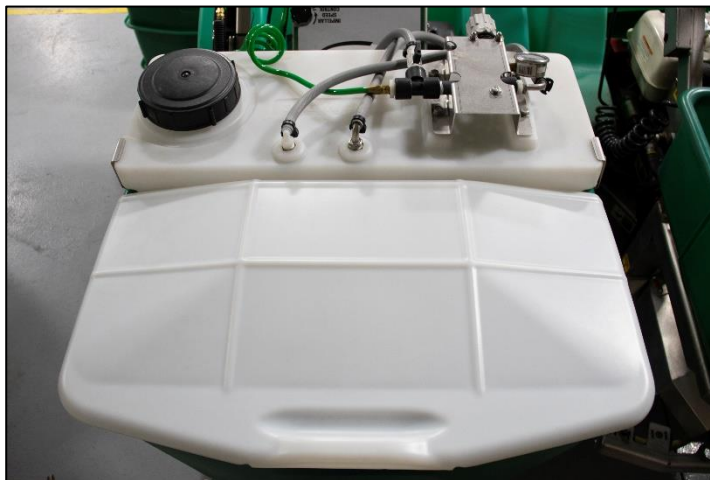

Final assembly showing installed spot-sprayer with slide-on cover.